

# ATA PTX5 REMOTE coding

The remote replacement compatible with PTX5V1, and BND tritran, pls know it **can not** compatible with **PTX5V2, or BND tritran+**

Choose the remote you want like this :

press and hold the NO.1 and NO. 2 at the same time ,you will see LED light on ,and keep it till the led indicator light off ,that mean it has been change to be another code .

(default is ptx5v1 ATA)

## Storing remote code

1, Press and hold the SW1 or SW2 on the receiver , the LED will flash.

2, press one remote button which you want to desire to the receiver for 2 seconds ,you will find the LED indicator will flash faster it means code in successful.

3, Release the SW1 or SW2 button and after 2 seconds ,press the remote button which you have desired just now and test it on receiver. you will find the LED light on steadily for a few seconds and then off. Now coding finished, you can control now .

## ATA PTX5 REMOTE CODING INSTRUCTIONS



### Coding a Transmitter Button for Door Operation

1. Press and hold the DOOR CODE button.
2. Press one of the four buttons on the remote for two (2) seconds, release for two (2) seconds whilst still holding the door code button, then press the same button again for two (2) seconds.
3. Release the DOOR CODE BUTTON.
4. Press the remote button to test.

