



 
## Adventure Kings Battery Box **USER MANUAL**

**PLEASE READ AND UNDERSTAND THIS MANUAL  
BEFORE USING THE ADVENTURE KINGS BATTERY BOX**

## WARNINGS AND SAFETY INFORMATION

- Before installing a battery in the Battery Box, ensure that you have read through all relevant product and safety information for that battery.
- Do not insert foreign objects into the ports of the Battery Box as this may lead to electric shock.
- Do not submerge the Battery Box in liquids.
- Do not attach a battery to the Battery Box if it or your hands are currently exposed to moisture or rain.
- Do not expose the Battery Box to extreme temperatures.
- When charging, adequate ventilation must be provided to dissipate heat and battery gases. Keep clear of naked flames, sparks or conductive material while charging a battery.
- Do not attempt to disassemble the Battery Box as this may result in electric shock, fire or explosion. Any attempt to disassemble, perform unapproved repairs or make modifications to the Battery Box will void the warranty.
- Always use safe lifting techniques when lifting and installing the Battery Box.
- The Battery Box is not intended to be installed or operated by people (including children) with reduced physical or mental capabilities, or those who are under the influence of drugs or alcohol.
- Make sure that you attach the correct wires to the appropriate terminals of your battery; incorrect installation could result in damage to the unit or voiding of the warranty.
- Do not use the Battery Box to charge medical devices.


# Features

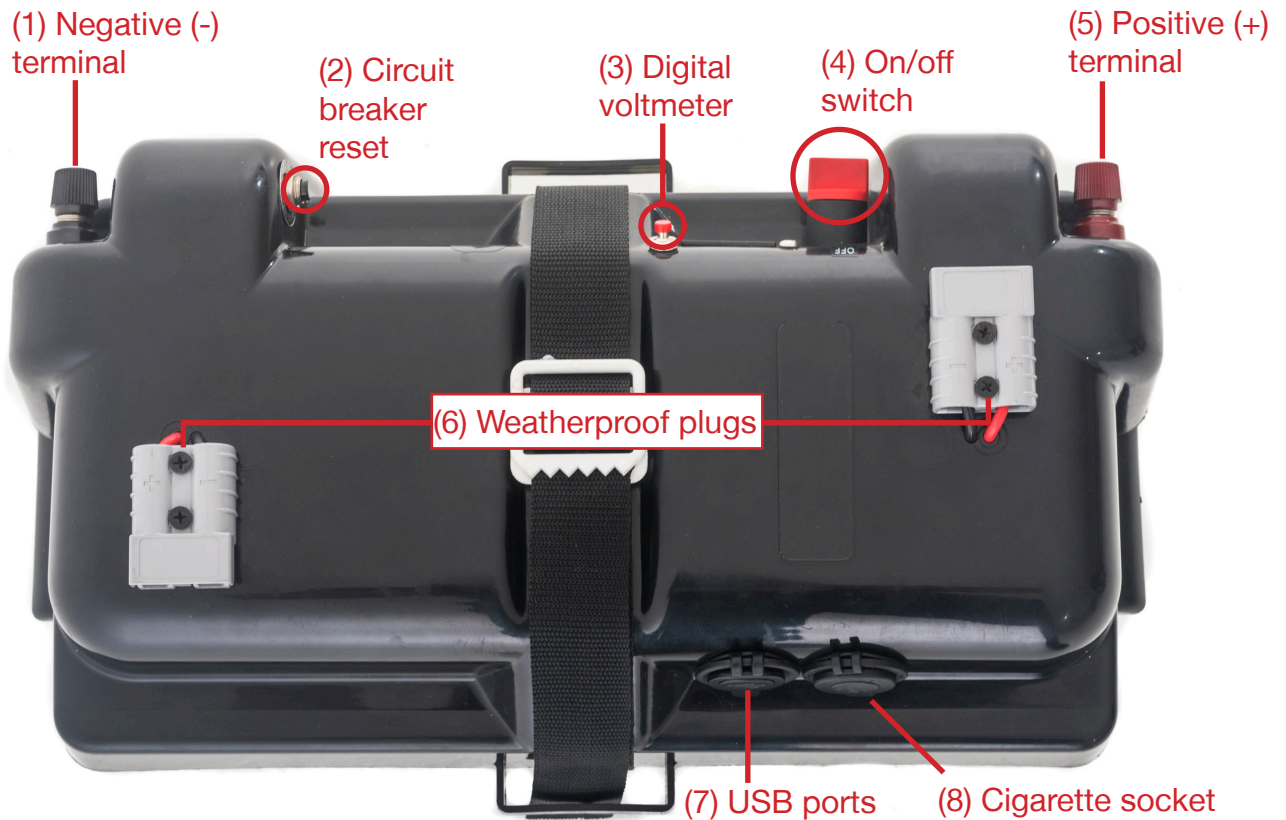

1. Negative (-) terminal
2. Circuit breaker reset (**10A**)
3. Digital voltmeter
4. On/off switch
5. Positive (+) terminal
6. Weatherproof plugs (**30A fuse**)
7. 5V USB ports (1A / 2.1A) (**10A fuse**)
8. 12V cigarette socket (**10A fuse**)

**WARNING:** The positive and negative terminals on the exterior of the battery box are **not** fused. Ensure that you install fuses or circuit breakers where necessary.

## Installing a battery

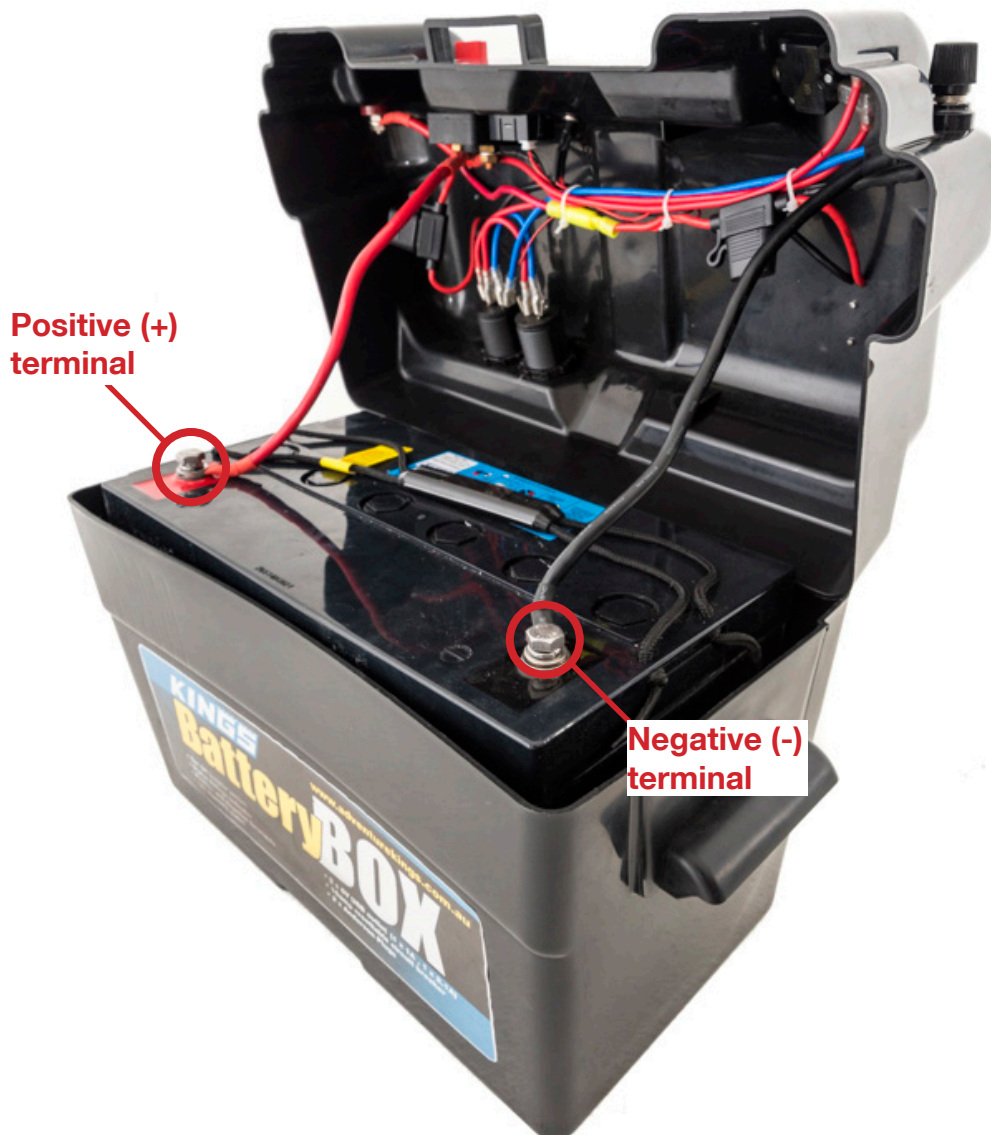 

1. Remove the lid of the Battery Box.
2. Place the battery in the Battery Box.
3. Slot in the divider to prevent movement of the battery inside the Battery Box.
4. Attach the eyelets from the Battery Box lid to the corresponding positive and negative terminals on the battery. Fasten the bolts firmly, ensuring they will not vibrate loose.
5. Place lid onto the Battery Box, making sure that it is evenly and completely shut.



6. With the lid on and the terminals connected, switch the battery to **on** using the on/off switch and test the voltage with the voltmeter.
7. If the voltmeter lights up and displays the battery's voltage, you can now secure the lid.
8. To secure the lid, thread the strap around the box and through the two plastic buckles. Fasten and secure on top of the unit.
9. You are now free to plug in your devices to power them with your battery.



## Checking battery voltage

1. Attach a battery to the Battery Box, ensuring the terminals are properly fitted and turn the on/off switch to the **on** position.



 
2. Press and hold the red button to the right of the display.
3. The Battery Box display will now show the voltage that the Battery Box is outputting.

## Troubleshooting



**If you are not receiving power through the cigarette socket or USB ports:**

- Reset the circuit breaker using the small black button shown above.

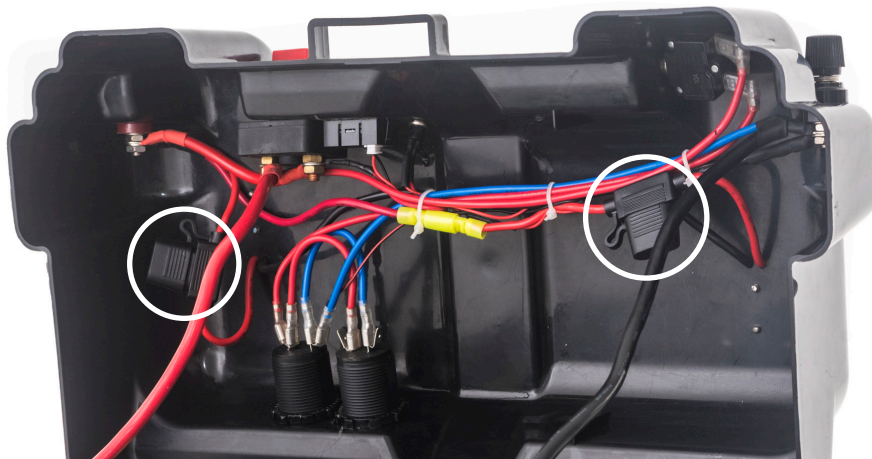

**If you are not receiving power through the weatherproof plugs:**

- Check the fuses circled above and replace if necessary.



# 12 MONTH LIMITED WARRANTY

## WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

---

## WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

---

## THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
  - b. Faulty installation or modification made during installation
  - c. The cost of removing and reinstalling the product
  - d. Travel and /or other expenses due to customer's remote location
  - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
  - f. Any loss directly or indirectly associated with the product failing to operate.
  - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
- 

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

## CALL 1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD  
2 Stanley St Silverwater NSW, 2128  
PHONE: 1800 88 39 64  
[www.4wdsupacentre.com.au](http://www.4wdsupacentre.com.au)